

1) Engine Switch - Flip the operation switch to the ON position




2) Breaker Switch – Flip to the ON position



3) GFI/Ground Fault Interrupter - Buttons are to be in



4) Gas Switch - ON position.

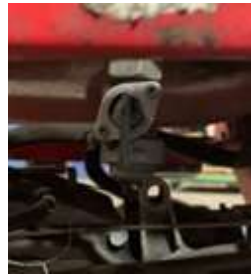

5) Choke - pull out – adjust after generator starts



6) Pull handle



After steps 1 – 6, the generator should be running. The run time will varies slightly - 3 ½ - 4 hours